



Photo: DJV182

Ergonomically designed handle with soft grip
Provides comfortable grip and more control while minimizing hand fatigue and pain.

Powered by 14.4V/ 18V Li-ion batteries
• High power density allows compact and lightweight tool design without power loss.
• Can be charged at any time because Li-ion battery is free from memory effect.

Variable speed control by dial
located on the rear side for easier operation

Newly designed dust nozzle
Dust nozzle can be set to Base firmly with Thumb screw.



Dust nozzle can be attached over the sawdust exhaust port for connection to Makita vacuum cleaner.

Rigid aluminum base bevels 0 to 45° left and right.

3 Orbital settings + Straight cutting
Optimum cutting action can be selected by simply turning the change lever.

Cover Plate
Protects workpiece from scratches

Blower function
keeps the cut line clean.

Soft start
allows for accurate landing of the blade on the surface of workpiece in various applications.

Soft no load speed
reduces the blade stroke at a no load speed of 3,500rpm (highest speed mode) for easy trace of cutting line.

Battery & Charger Time Reference Chart (in Minutes)

DJV141, DJV142	DJV181, DJV182	DC18RC / DC18RA	DC18SF	DC18SD	DC18SE (Automotive)
BL1840 4.0Ah	BL1440 4.0Ah	36min. Fast Charging	90min. 1 to 2 batteries 180min. 3 to 4 batteries	90min.	
BL1830 3.0Ah	BL1430 3.0Ah	22min. Fast Charging	60min. 1 to 2 batteries 120min. 3 to 4 batteries	60min.	
BL1815N 1.5Ah		15min. Fast Charging	30min. 1 to 2 batteries 60min. 3 to 4 batteries	30min.	

Cordless Jig Saw		DJV181Z/DJV182Z	
		DJV181Z	DJV182Z
Variable Speed			
Brake			
Orbital Cutting			
Bayonet Shank Jig Saw Blade			
Dust Collecting			
Built-in Job Light			
Carrying Case			
Capacity		Wood : 135mm (5-5/16") Steel : 10mm (3/8")	Wood : 135mm (5-5/16") Steel : 10mm (3/8")
Length of stroke		26mm (1")	26mm (1")
Strokes per minute (spm)		800 - 3,500	800 - 3,500
Dimensions (L x W x H)		298x77x189mm	266x77x208mm
Net Weight*		2.5kg (BL1830, BL1840) 2.2kg (BL1815N)	2.6kg (BL1830, BL1840) 2.4kg (BL1815N)
		DJV181Z: No battery, charger	DJV182Z: No battery, charger
Standard Equipment : Anti-splintering device (415524-7), cover plate (417852-6), jigsaw blade (B-22 (A-85737), B-10 (A-85628), BR-13 (A-85793)), hex. wrench 4 (783202-0).			

weight according to EPTA-Procedure 01/2003

Items of standard equipment and specifications may vary by country or area.

CÔNG TY TNHH MAKITA VIỆT NAM

Kho 4-5-6, Block 16, 18L1-2 Đường số 3, KCN VSIP II, P. Hòa Phú, TP. Thủ Đức, Bình Dương
ĐT : 0274 362 8338 - Fax : 0274 362 8339 - Website : www.makita.com.vn

CHI NHÁNH CTY TNHH MAKITA VN TẠI MIỀN BẮC

Kho 5, số 1, đường số 6, KCN - ĐT - DV VSIP Bắc Ninh, X. Phù Chân, TX Từ Sơn, T. Bắc Ninh
ĐT : 0222 376 5942 Fax : 0222 376 5941

TRUNG TÂM DỊCH VỤ KHÁCH HÀNG CHI NHÁNH ĐÀ NẴNG

102 Triều Nữ Vương, P. Hải Châu 2, Q. Hải Châu, TP. Đà Nẵng
ĐT : 0236 352 5079/ 0236 352 5179 Fax : 0236 352 5479

TRUNG TÂM DỊCH VỤ KHÁCH HÀNG CHI NHÁNH CẦN THƠ

366 Võ Văn Kiệt, Khu Vực 5, Phường An Thới, Quận Bình Thủy, Thành Phố Cần Thơ
ĐT: 0292 3894 358 Fax: 0292 3894 359

TRUNG TÂM DỊCH VỤ KHÁCH HÀNG CHI NHÁNH BÙN MA THUỘT

60 Y Jút, P.Thống Nhất, TP. Bùn Ma Thuột, T. Đắk Lắk
ĐT : 0262 355 4556 Fax: 0262 355 4557

TRUNG TÂM DỊCH VỤ KHÁCH HÀNG CHI NHÁNH HẢI PHÒNG

Số 15, Phố Phạm Hồng Thái, Q. Hồng Bàng, TP. Hải Phòng
Điện thoại : 0225 8831 529

TRUNG TÂM DỊCH VỤ KHÁCH HÀNG CHI NHÁNH NHA TRANG

1053 Đường 2 tháng 4, P. Vạn Thạnh, TP. Nha Trang, T. Khánh Hòa
ĐT : 0258 3823 338

TRUNG TÂM DỊCH VỤ KHÁCH HÀNG CHI NHÁNH HỒ CHÍ MINH

Số 12 Trịnh Văn Cấn, P. Cầu Ông Lãnh, Q. 1, TP. Hồ Chí Minh
Điện thoại : 028 3821 5191



Cordless Jig Saw

DJV141, DJV142
DJV181, DJV182

Satisfy Professional's Needs



As powerful as corded Jigsaws, yet lightweight

DJV142, DJV182

Top handle type

DJV141, DJV181

Barrel handle type



Excellent Performance Provides High Productivity

Powerful BLDC motor

provides higher operating efficiency than that of the current BLDC motor, increasing max output power and work amount on a single full battery charge.

BL MOTOR



Barrel handle type

DJV181 DJV141



Top handle type

DJV182 DJV142

Compact, Lightweight design

Barrel handle type



2.5kg (DJV181) / 2.4kg (DJV141)

DJV181; with battery BL1840 DJV141; with battery BL1440

Electronic push button switch

located on the both sides of Housing

How to start the machine;

Press button A once*1 and the machine will be turned into standby mode and LED job light will turn on. Then press button B within 10 seconds*2 and the machine will start.

How to stop the machine;

Press button A to stop and the machine will be automatically locked in off mode. Press button 2 to stop in standby mode.



*1: If button A is pressed once again within 10 seconds, LED job light will turn off and the machine will be automatically locked in off mode.
*2: If no button is pressed for 10 seconds after LED job light is turned on, the light will automatically turn off and the machine will be automatically locked in off mode.
Note: Button B is disabled when the machine is locked in off mode.

Top handle type



2.6kg (DJV182) / 2.5kg (DJV142)

DJV182; with battery BL1840 DJV142; with battery BL1440

Trigger switch with lock-on button

provides the same excellent operability as AC models

How to start the machine;

Press Lock-off button once*1 and the machine will be turned into standby mode and LED job light will turn on. Then pull the trigger of Switch within 10 seconds*2 and the machine will start. For continuous operation, pull the trigger then push in Lock-on button.

How to stop the machine;

Release the trigger of Switch to stop the machine. When the machine is locked in continuous operating mode, pull the trigger fully then release it.



*1: If you press Lock-off button once again within 10 seconds, LED job light will turn off and the machine will be automatically locked in off mode.
*2: If Lock-off button is not pressed nor the trigger of Switch is not pulled for 10 seconds after LED job light is turned on, the light will automatically turn off and the machine will be automatically locked in off mode.
Note: Trigger switch is disabled when the machine is locked in off mode.

LED job light (twin-light)

for illuminated operation



Toolless blade clamp

Blade can be attached with single action - simply by pushing it into the clamp;
can be also removed easily with single action - simply by turning large lever

