 


# QTG60(M)L-ETN

Ø60mm Ethernet LED Tower Lights



Remote control through internet or local area network



QTG60(M)L-ETN

## Mounting Bracket

Standard	LB18	LW18	QZ18
Steel	Steel	PC	PC
SZ18	QL18	QLA18	
AI	PC	PC	

\* Please refer to page 188-193 for detailed dimensions.

## Customization

- Customized color arrangement available
- Customized pole length available
- Wall mount bracket available



Wall Mount Bracket  
TWS45



Wall Mount Bracket  
TWA45

## QTG60(M)L-ETN Ø60mm Ethernet Tower Light


Model number	Layer	Voltage	Current	Certificate	Color
QTG60(M)L-ETN-BZ QTGA60(M)L-ETN-BZ	1	DC12V DC24V AC110V-220V	0.245A 0.155A Max. 0.070A	CE	• R-Red
	2	DC12V DC24V AC110V-220V	0.335A 0.200A Max. 0.090A		• R-Red • G-Green
	3	DC12V DC24V AC110V-220V	0.425A 0.245A Max. 0.110A		• R-Red • A-Amber • G-Green
	4	DC12V DC24V AC110V-220V	0.515A 0.290A Max. 0.130A		• R-Red • A-Amber • G-Green • B-Blue
	5	DC12V DC24V AC110V-220V	0.605A 0.335A Max. 0.150A		• R-Red • A-Amber • G-reen • B-Blue • W-White

## Technical Diagram

(Units : mm)

QTG(A)60L-ETN-BZ

QTG(A)60ML-ETN-BZ

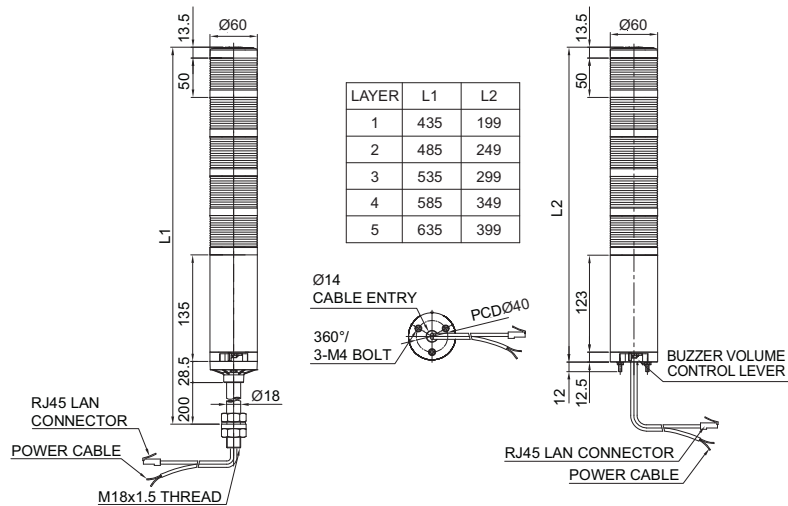

## Wiring Instructions

- Apply properly rated voltage through the POWER CABLE
- Connect the RJ45 connector of the UTP cable into the PC's Ethernet port or router
- External power line : UL1015 AWG18(0.75sq)×2C 400mm
- Power plug will be provided in case of AC type
- UTP cable : Category 5 cable

## Ordering Specification

QTG60L-ETN-BZ	-	3	-	24	-	RAG	-	LW18
[Model number]		[Layer]		[Voltage]		[Color]		[Mount bracket]
• QTG60L-ETN-BZ • QTG60ML-ETN-BZ • QTGA60L-ETN-BZ • QTGA60ML-ETN-BZ		• 1-1 layer • 2-2 layers • 3-3 layers • 4-4 layers • 5-5 layers		• 12-DC12V • 24-DC24V • 110/220 • -AC110V-220V		• R-Red • A-Amber • G-Green • B-Blue • W-White		• None • -Standard • Bracket • -LB18 -LW18 • -QZ18 -SZ18 • -QL18 -SL18 • -QLA18