Wall Mount LED Signal Tower with Built-in Audible Alarm **QWTD**



Thank you for purchasing Qlight's products. Please read this user manual carefully prior to installation and operation to ensure safe and correct use.

▲ Precautions for Safety

Failure to follow the instructions below may cause a loss of life or serious physical injury.

- 1. During wiring or maintenance, please completely turn off the power of the product. (Failure to follow this may lead to an electric shock.)
- Do not install the product in locations that subjects it to excessive dust or water other than the conditions designated by the IP protection ratings indicated for each product. (Failure to follow these instructions may cause a fire to the product, electric shock, physical injury, malfunction or damage to the product.)
- 3. Do not alter or repair this product. If maintenance or repair service is required, please contact your local Qlight contact point. (Failure to follow these instructions may lead to fire, electric shock, or product damage.)
- 4. Please apply the correct voltage to the product. (Failure to follow these instructions may lead to fire, electric shock, or product damage.)
- 5. When the product is applied to a condition that may impact lives or property, please make sure to have a double safety device. (Failure to follow this may cause damage to property, fire, electric shock and loss of life.)

A Precautions for Correct Use

Failure to follow the proper instructions may cause damage to property, the product, or malfunction of the product that would void the warranty.

- 1. Please remove any objects that can interrupt ventilation around the product.
- 2. Please turn off the power of the product immediately if it fails to operate properly.
- 3. Carefully wire the product according to each product's specification.
- 4. Please be careful in preventing chemicals such as thinner, benzene, etc. in contact with the surface of the product.
- 5. Do not apply excessive force/impact to the product.
- 6. Failure to follow any of the instructions above may cause malfunction or damage to the product, fire, and electric shock.


Ordering Specifications

QWTDL	- WS	- 3	- 110/220	- RAG
[Model number]	[Sound]	[Layer]	[Voltage]	[Color]
I	I	I.	I	I
• QWTDL • QWTDLF	 WS-Warning sound WP-Special warning sound WM-Melody WA-Alarm 	 1-1Layer 2-2Layers 3-3Layers 4-4Layers 5-5Layers 	• 12-DC12V • 24-DC24V • 110/220-AC110V-220V	R-Red A-Amber G-Green B-Blue W-White



Please scan the QR code for more detailed product information.

www.qlight.com

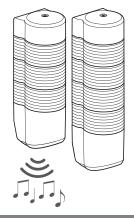

Product Specifications

Model number	Layer	Voltage	Current	Certificate	Weight	Color	Cui			rrent specifications				
number		AC/DC12V	0.065A		0.14kg			Voltage condition		12V	AC/DC24V		AC110-220V	
	1	AC/DC24V	0.050A		0.14kg	R-Red		Light (Per layer)		A	0.040A		Max 0.024A	
		AC110V-220V	Max. 0.025A		0.27kg			Sound		DA	0.	160A	Max 0.031A	
		AC/DC12V	0.130A		0.18kg	R-Red G-Green			1					
	2	AC/DC24V	0.050A		0.18kg		Туре	Built-ir	n sound	Chan	nnel	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	pe of sound	
QWTDL		AC110V-220V	Max. 0.050A		0.32kg			5 Warning Sounds 5 Special Warning Sounds 5 Melodies		Ch1EmergeCh2AmbulaCh3AmbulaCh4HighCh5MachiCh2AbandCh3MachiCh4HighCh57 ShortCh1SCh2Ch2Ch3CCh4FCh4SCh3CCh4F		Fire.A-ANG(560Hz-1.5kHz) Emergency WA-U(600Hz- 1.5kHz) Ambulance PI-PO(450Hz- 900Hz) Machinery Fault(820Hz)		
Steady type		AC/DC12V	0.195A		0.23kg	R-Red A-Amber	WS							
QWTDLF	3	AC/DC24V	0.150A	CE	0.23kg									
Steady/ Flashing		AC110V-220V	Max. 0.075A		0.36kg	G-Green							High Expansion(1kHz) Fire.A-ANG(560Hz-1.5kHz)	
type	4	AC/DC12V	0.260A		0.27kg	R-Red A-Amber G-Green B-Blue R-Red A-Amber G-Green B-Blue W-White	WP					Aband	Abandon Alarm(820Hz) Machinery Fault(820Hz)	
		AC/DC24V	0.200A		0.27kg							High Expansion(1kHz) 7 Short PI. / 1 Long(1kHz) Sweet Home For Elise		
		AC110V-220V	Max. 0.100A		0.41kg									
		AC/DC12V	0.325A		0.32kg									
•	5	AC/DC24V	0.250A		0.32kg		WM					P	uckoo's Waltz Piano Sonata	
		AC110V-220V	Max. 0.125A		0.45kg					Ch Ch			urkish March	
	QWTD-WS 5 Warning Sounds QWTD-WP 5 Special Warning Sounds							5 AI	arms	Ch Ch Ch Ch Ch	2 3 4	C F P	ep Intermittent Door Chime Phone Ring I.PI.PI Short ripping Beat	
QWTD-WM 5 Melodies CE compli QWTD-WA 5 Alarms CE compli							complia	nt : DC12	V/24V					

* AC type model has a free-voltage range of AC100V-240V.

Protection rating : IP54
Ambient operating temperature : -30°C to +50°C


Dimensions


(Unit : mm)



LAYER	L			
1	154			
2	195			
3	236			
4	277			
5	318			

QWTD

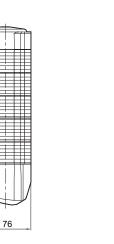


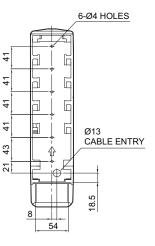


Wiring Instructions

- · QWTD series can be wired with either external contact or transistor.
- For QWTDLF model, user can choose light function between steady and flashing mode through wiring configuration.

QWTDL-DC/AC(Steady Type)

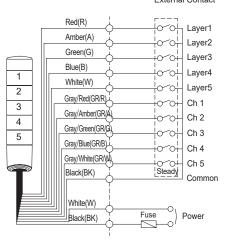


External Contact

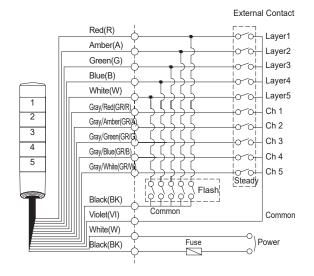


QWTDLF-DC/AC(Steady/Flashing Type)

QWTDLF-DC/AC(Steady/Flashing Type)

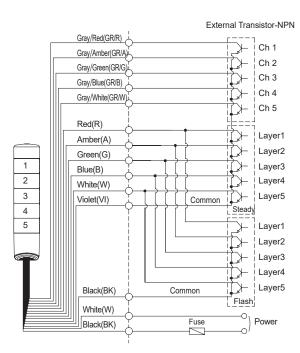

QWTDL-DC/AC(Steady Type)

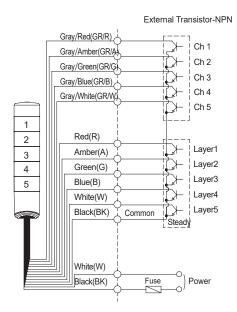

• External power line - UL1015 AWG18(0.75sq) x 2C 400mm External signal line - UL1007 AWG22(0.3sq) 400mm

• This product can be wired regardless of polarity.

Г

Guide for WS/WP sound type models

WS and WP type products are factory set to its specific sound. The sounds can be configured by using the following table.


	$\begin{array}{c cccc} Ch1 & Ch2 & Ch3 \\ ON(1) & \bigcirc & \bigcirc \\ OFF(0) & \blacksquare & \blacksquare & \\ \end{array} \end{array} By using the sound selection switch shown below, products that contains 7 warning sounds can be combined into 8 combination.$								
No.	1	2	3	Ch1	Ch2	Ch3	Ch4	Ch5	
1	1	0	0	SND01 Fire.A-ANG	SND02 Emergency WA-U	SND03 Ambulance PI-PO	SND05 Machinery Fault	SND06 High Expansion	
2	0	1	0	SND01 Fire.A-ANG	SND04 Abandon Alarm	SND05 Machinery Fault	SND06 High Expansion	SND07 7 Short PI. / 1 Long	
3	1	1	0	SND01 Fire.A-ANG	SND02 Emergency WA-U	SND04 Abandon Alarm	SND05 Machinery Fault	SND06 High Expansion	
4	0	0	1	SND01 Fire.A-ANG	SND03 Ambulance PI-PO	SND05 Machinery Fault	SND06 High Expansion	SND07 7 Short PI. / 1 Long	
5	1	0	1	SND02 Emergency WA-U	SND03 Ambulance PI-PO	SND04 Abandon Alarm	SND05 Machinery Fault	SND06 High Expansion	
6	0	1	1	SND01 Fire.A-ANG	SND02 Emergency WA-U	SND03 Ambulance PI-PO	SND04 Abandon Alarm	SND07 7 Short Pl. / 1 Long	
7	1	1	1	SND01 Fire.A-ANG	SND03 Ambulance PI-PO	SND04 Abandon Alarm	SND06 High Expansion	SND07 7 Short PI. / 1 Long	
8	0	0	0	SND02 Emergency WA-U	SND03 Ambulance PI-PO	SND04 Abandon Alarm	SND05 Machinery Fault	SND07 7 Short PI. / 1 Long	

■ Guide for WM/WA sound type models

WM and WA type products are factory set to its specific sound. The sounds can be configured by using the following table.


ON(1) OFF(0		By using the sound selection switch shown below, products that contains 13 melody								
No.	1	2	3	Ch1	Ch2	Ch3	Ch4	Ch5		
1	1	0	0	SND08 Sweet Home	SND09 For Elise	SND10 Cuckoo's Waltz	SND11 Piano Sonata	SND12 Turkish March		
2	0	1	0	SND16 Beep Intermittent	SND17 Door Chime	SND18 Phone Ring	SND19 PI.PI.PI Short	SND20 Tripping Beat		
3	1	1	0	SND08 Sweet Home	SND11 Piano Sonata	SND13 Magic Flute	SND17 Door Chime	SND19 PI.PI.PI Short		
4	0	0	1	SND13 Magic Flute	SND14 Badinerie	SND15 Pine Apple Rag	SND08 Sweet Home	SND09 For Elise		
5	1	0	1	SND10 Cuckoo's Waltz	SND11 Piano Sonata	SND17 Door Chime	SND18 Phone Ring	SND20 Tripping Beat		
6	0	1	1	SND08 Sweet Home	SND12 Turkish March	SND16 Beep Intermittent	SND17 Door Chime	SND18 Phone Ring		
7	1	1	1	SND08 Sweet Home	SND11 Piano Sonata	SND12 Turkish March	SND17 Door Chime	SND19 PI.PI.PI Short		
8	0	0	0	SND11 Piano Sonata	SND12 Turkish March	SND13 Magic Flute	SND16 Beep Intermittent	SND18 Phone Ring		


Sound Selection Switch

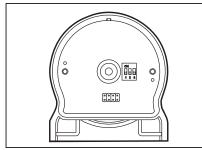


Please refer to page 4 'Sound Selection' section of this manual for detailed instruction.

Sound Output Section

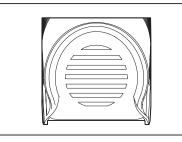

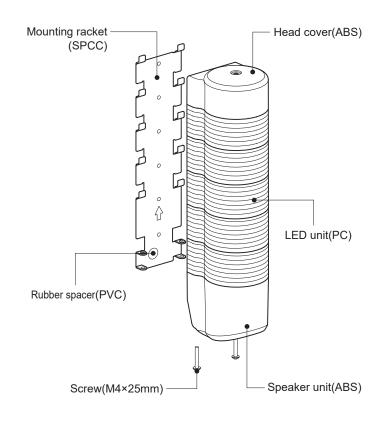

Replacing/ Rearranging LED Lens Units

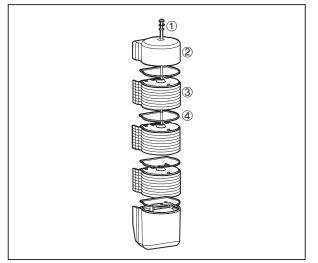

Please ensure the power is off before replacing or rearranging the LED units. Please carefully follow the following instructions.


- 1. Remove the head cover 0 by loosening the fixing screw 0.
- 2. Remove the LED unit by pulling it ③ upward.
- 3. Replace or rearrange the LED units.
- 4. Assemble in the reverse order of removing the LED units, Be careful not to let the rubber packing (a) fitted on the top of each unit come off.


Installation Environment and Protection Rating

- This product is designed for indoor use with protection rating of IP54.
- If the product is installed in locations that subject it to excessive dust or water other than the designated IP protection rating indicated(IP54), it may cause malfunction or damage to the product.
- For further information, please visit our website(www.qlight.com).

Installation

- The user need to install the mounting bracket on to the mounting surface first to fix the product body on to the mounting surface.
- Drill proper mounting holes in accordance with the number of LED lens unit, referring to the installation diagrams below.

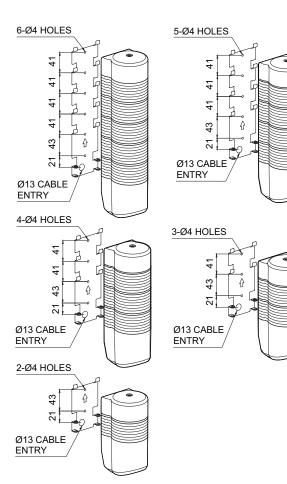

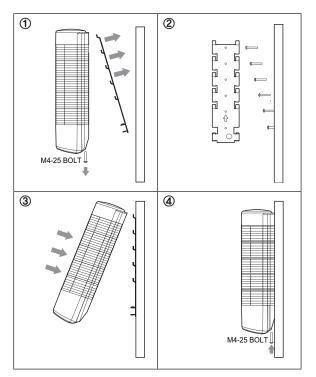


- Remove the mounting bracket from the product by removing two M4 screws from the speaker unit.
- ② Mount the mounting bracket to the mounting surface.
- ③ Hook the rear of the head cover to the upper bracket, then push the body against the mounting bracket.
- ④ After tightly attaching the product body to the mounting bracket, tighten the two M4 screws removed in step ① at the bottom of the speaker unit.

Technical Certification

• Qlight products are designed to meet strict quality and technical standards. Thus, the Qlight brand is widely recognized for its high quality and technical innovations from leading institutions around the world.



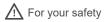

Specification and dimensions listed in this catalogue subject to change without notice for product quality improvement. The newest product information is available on our website.(www.qlight.com) Please read the instruction manual attached to the product carefully before installation and use.

Qlight Co., Ltd. www.qlight.com | trade@qlight.com

Head Office | Suite #1510, STX-V Tower, 128 Gasan digital 1-ro, Geumcheon-gu, Seoul, Korea Tel. +82-2-2679-6152(Toll free. +82-80-328-2222) Fax. +82-2-2679-6154

Factory | 185-25, Mukbang-ro, Sangdong-myeon, Gimhae-si, Gyeongsangnamdo, Korea Tel. +82-55-328-1111(Toll free. +82-80-328-1111) Qlight OverSEAs Sales Dept | 704 Nakdong-daero, Sasang-gu, Busan, Korea(Eomgung-Dong) Tel : +82-51-620-4100 Qlight Public Relations & Marketing Team Office | 704 Nakdong-daero, Sasang-gu, Busan, Korea(Eomgung-Dong) Tel. +82-51-245-0017

Qlight USA, Inc. www.glight.com www.glightusa.com | sales@glightusa.com 3003 North First Street, Suite #341, San Jose, CA 95134 USA Tel. +1-408-519-5740 Fax. +1-408-519-5739

SHANGHAI Qlight Electronic Co., Ltd. www.qlight.com www.qlightcn.com | qlightcn@qlight.com China Factory/ Shanghai Sales Office | #19, Nanda Road, Baoshan Area, Shanghai, China Tel. +86-21-6651-7100 Fax. +86-21-6315-3929 China Factory Site 2 (Qidong) | #33, Haiyan Road, Qidong High-tech Industrial Development Zone, Qidong, Jiangsu Province, China Tel +86-513-8384-9999 Fax +86-513-8384-9910



Sightec Solution such as model name, symptom, telephone number and address. *ALL PRODUCT, PRODUCT SPECIFICATIONS AND DATA ARE SUBJECT TO CHANGE WITHOUT NOTICE TO IMPROVE RELIABILITY FUNCTION OR DESIGN OR OTHERWISE

RELIABILITY, FUNCTION OR DESIGN OR OTHERWISE. Head office : Suite #1510, STX-V Tower, 128 Gasan digital 1-ro, Geumcheon-gu, Seoul, Korea (Postal Code : 08507) Factory : 185-25, Mukbang-Ro, Sangdong-Myeon, Gimhae-Si, Gyeongsangnam-Do, Korea (Postal Code : 50805)