

Classification	Model Name	Description
	(3 M)	USB port, use for AS332T-A, AS332P-A, and AS324MT-A
	UC-PRG030-20A (3 M)	Use for the connection between a PLC and a PC with a RJ45 port, use for AS332T-A, AS332P-A, AS324MT-A, AS-FEN02, AS-FPN02 and AS-FECAT.
I/O extension cable	UC-ET010-24B (1 M) UC-ET020-24B (2 M) UC-ET030-24B (3 M)	MIL connector, 40 Pin ↔ 40 Pin, shielded, use for AS32AM10N-A, AS32AN02T-A, AS64AM10N-A and AS64AN02T-A
	UC-ET010-24D (1 M) UC-ET020-24D (2 M) UC-ET030-24D (3 M)	MIL connector, 40 Pin ↔ 2x 20 Pin, shielded, use for AS332T-A, AS332P-A, AS324MT-A, AS32AM10N-A, AS32AN02T-A, AS64AM10N-A, and AS64AN02T-A
External terminal module	UB-10-ID16A	16 inputs/outputs, 20-Pin MIL connector, use for AS332T-A, AS332P-A, AS324MT-A, AS32AM10N-A, AS32AN02T-A, AS64AM10N-A and AS64AN02T-A
	UB-10-ID32A	32 inputs, 40-Pin MIL connector, use for AS32AM10N-A and AS64AM10N-A
	UB-10-IO32D	Terminal block (spring clamp/MIL connector), MIL connector to 40-Pin spring clamp terminal block, use for AS332T-A, AS332P-A, AS324MT-A, AS32AM10N-A, AS32AN02T-A
	UB-10-OR16A	16 relay outputs, 20-Pin MIL connector, NPN, use for AS332T-A, AS32AN02T-A and AS64AN02T-A
	UB-10-OR16B	16 relay outputs, 20-Pin MIL connector, PNP, use for AS332P-A
	UB-10-OT32A	32 transistor outputs, 40-Pin MIL connector, NPN, use for AS32AN02T-A and AS64AN02T-A
Network cables	UC-CMC003-01A (0.3 M)	CANopen communication cable, use for AS-FCOPM series
	UC-CMC005-01A (0.5 M)	CANopen communication cable, use for AS-FCOPM series
	UC-CMC010-01A (1 M)	CANopen communication cable, use for AS-FCOPM series
	UC-CMC015-01A (1.5 M)	CANopen communication cable, use for AS-FCOPM series

	UC-CMC020-01A (2 M)	CANopen communication cable, use for AS-FCOPM series
	UC-CMC030-01A (3 M)	CANopen communication cable, use for AS-FCOPM series
	UC-CMC050-01A (5 M)	CANopen communication cable, use for AS-FCOPM series
	UC-CMC100-01A (10 M)	CANopen communication cable, use for AS-FCOPM series
	UC-CMC200-01A (20 M)	CANopen communication cable, use for AS-FCOPM series
	UC-EMC003-02C (0.3 M)	Ethernet communication cable, use for AS Series CPU modules, AS-FEN02, AS-FPFN02 and AS-FECAT.
	UC-EMC005-02C (0.5 M)	Ethernet communication cable, use for AS Series CPU modules, AS-FEN02, AS-FPFN02 and AS-FECAT.
	UC-EMC010-02C (1 M)	Ethernet communication cable, use for AS Series CPU modules, AS-FEN02, AS-FPFN02 and AS-FECAT.
	UC-EMC020-02C (2 M)	Ethernet communication cable, use for AS Series CPU modules, AS-FEN02, AS-FPFN02 and AS-FECAT.
	UC-EMC050-02C (5 M)	Ethernet communication cable, use for AS Series CPU modules, AS-FEN02, AS-FPFN02 and AS-FECAT.
	UC-EMC100-02C (10 M)	Ethernet communication cable, use for AS Series CPU modules, AS-FEN02, AS-FPFN02 and AS-FECAT.
	UC-EMC200-02C (20 M)	Ethernet communication cable, use for AS Series CPU modules, AS-FEN02, AS-FPFN02 and AS-FECAT.