
# **Autonics**

# **Uultra-thin Photoelectric Sensor** BTF SERIES

# INSTRUCTION MANUAL

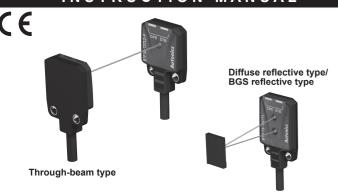

Thank you for choosing our Autonics product. Please read the following safety considerations before use.

# Safety Considerations

- \*Please observe all safety considerations for safe and proper product operation to avoid hazards
- ★▲ symbol represents caution due to special circumstances in which hazards may occur.

Marning Failure to follow these instructions may result in serious injury or death ▲ Caution Failure to follow these instructions may result in personal injury or product damage.


- Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)
- Failure to follow this instruction may result in fire, personal injury, or economic loss.
- 2. Do not disassemble or modify the unit. Failure to follow this instruction may result in fire.
- 3. Do not connect, repair, or inspect the unit while connected to a power source.
- Failure to follow this instruction may result in fire.
- Check 'Connections' before wiring.

  Failure to follow this instruction may result in fire

# **▲** Caution

- 1. Use the unit within the rated specifications.
- Failure to follow this instruction may result in fire or product damage.
- 2. Use dry cloth to clean the unit, and do not use water or organic solvent Failure to follow this instruction may result in fire.
- 3. Do not use the unit in the place where flammable sunlight, radiant heat, vibration, impact, or salinity may be present. Failure to follow this instruction may result in fire or explosion

## Ordering Information

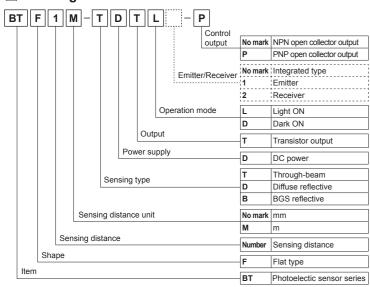

This information is intended for product management of through-beam type (No need to refer when selecting model)

- \*The above specifications are subject to change and some models may be discontinued
- (catalog, homepage).

# ■ Specifications

Model	NPN open collector output	BTF1M- TDTL	BTF1M- TDTD	BTF30- DDTL	BTF30- DDTD	BTF15- BDTL	BTF15- BDTD
Š	PNP open collector output	BTF1M- TDTL-P	BTF1M- TDTD-P	BTF30- DDTL-P	BTF30- DDTD-P	BTF15- BDTL-P	BTF15- BDTD-P
Туре		Through-beam		Diffuse reflective		BGS reflective	
Sensing distance		1m		5 to 30mm <sup>×1</sup>		1 to 15mm <sup>×1</sup>	
Sensing target		Opaque material over Ø2mm		Translucent, opaque materials			
Min. sensing target		Opaque material of Ø2mm		Ø0.2mm (sensing distance 10mm)		Ø0.2mm non-illuminated objects (sensing distance 10mm)	
Hysteresis		-		Max. 20% at sensing distance		Max. 5% at sensing distance	
Reflectivity characteristics (black/white error)		-		-		Max. 15% of maximum sensing distance	
Response time Power supply Current consumption		Max. 1ms					
		12-24VDC ±10% (ripple P-P: max. 10%)					
		Max. 20mA (this is for each emitter and receiver of throught-beam type.)					
Light	t source	Red LED (650r	nm)				
Ope	ration mode	Light ON	Dark ON	Light ON	Dark ON	Light ON	Dark ON
Cont	trol output	NPN or PNP open collector output  Load voltage: max. 26.4VDC::- Load current: max. 50mA  Residual voltage - NPN: max.1VDC::-, PNP: max.2VDC					
Protection circuit Indicator Connection Insulation resistance		Power reverse polarity protection circuit, output short over current protection circuit					
		Operation indicator: red LED, stability indicator: green LED					
		Cable type					
		Over 20MΩ (at 500VDC megger)					
Nois	e immunity	±240V the sq	uare wave nois	se (pulse width:1µs) by the noise simulator			
Dielectric strength		1,000VAC 50/60Hz for 1 miniute					
Vibration		1.5mm amplitude at frequency of 10 to 55Hz in each X, Y, Z direction for 2 hours					
Shock		500m/s² (approx. 50G) in each X, Y, Z direction for 3 times					
Prote	Ambient illu.	Sunlight: max. 10,000lx, incandescent lamp: max. 3,000lx (receiver illumination)					
	Ambient temp.	-25 to 55°C, storage: -40 to 70°C					
	Ambient humi.	35 to 85%RH, storage: 35 to 85%RH					
	ection	IP67 (IEC standards)					
Material		Case: polybutylene terephthalate, sensing part: polymethyl methacrylate, bracket: SUS304 (steel use stainless 304), bolt: carbon steel, sleeve: SUS304 (steel use stainless 304)					
Cable		Ø2.5mm, 3P, 2m (emitter of through-beam type: Ø2.5mm, 2P, 2m) (AWG 28, core diameter: 0.08mm, number of core: 19, insulator out diameter: Ø0.9mm)					
Accessory		Fixing bracket, M2 bolt: 4 Fixing bracket, M2 bolt: 2					

C€


# X1: Non-glossy white paper 50×50mm. X2: The weight includes packaging. The weight in parenthesis is for unit only. XThe temperature or humidity mentioned in Environment indicates a non freezing or condensation.

# Dimensions •Through-beam type


2-M2

Approval


Weight\*2

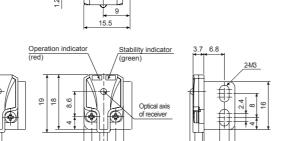


Approx. 70g (approx. 40g) Approx. 40g (approx. 25g) Approx. 40g (approx. 25g)

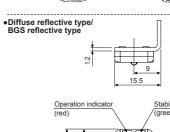


Cable Ø2.5, 2m

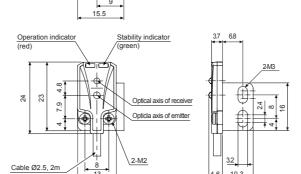

# Operation Mode

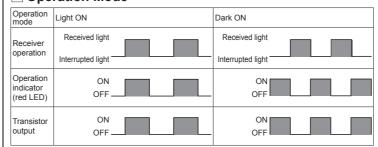

# Operating Timing Diagram

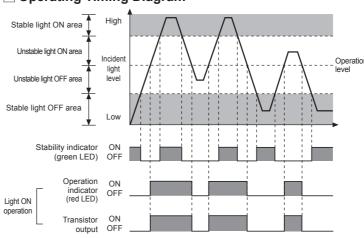


The waveform of 'Operation indicator' and 'Transistor output' are for Light ON operation The waveform are reversed for Dark ON operation

#### Installation and Adjustment

#### ○Installation

(unit: mm)


When using photoelectric sensors closely over two units, it may result in malfunction due to mutual interference. When installing the product, tighten the screw with a tightening torque of 0.3N·m. \*Do not impact on the unit with hard object and do not bend outgoing cable part too much. It may cause damage to waterproof function.

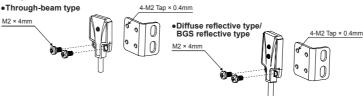


#### Notice for BGS reflective type

1)Make sure that the sensing side of sensor is parallel with the surface of each sensing

2)If the sensing object has glossary surface or high-reflection the sensor tilts to 5 to 10° as shown in the figure. Make sure whether the sensor is influenced by any background objects

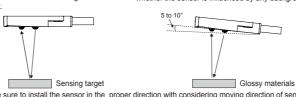


3)Make sure to install the sensor in the proper direction with considering moving direction of sensing objects

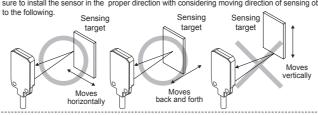

## Optical axis adjustment


#### •Through-beam type

Set emitter and receiver facing each other and adjust these up down, right left after to check the point operating stability indicator Fix emitter and receiver at the center of the point

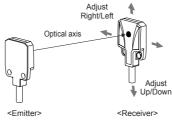

#### Diffuse reflective type/BGS reflective type


After place a sensing target, fix it in the middle of position where the stability indicator is operated adjusting the sensor to up-down, right-left. Make sure that the sensing side of sensor is parallel with the surface of each sensing target.

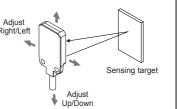


### Connections

•Through-beam type

Diffuse reflective type/BGS reflective type

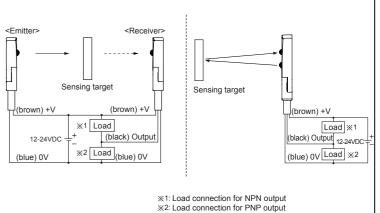

# ■ Control Output Circuit Diagram

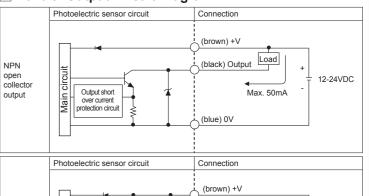

Output short over current protection circuit Max. 50mA 12-24VDC collector (black) Output Load (blue) 0V

XIf short-circuit the control output terminal or supply current over the rated specification. normal control signal is not output due to the output short over current protection circuit.

### Cautions during Use

- . Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected accidents. . When connecting a DC relay or other inductive load to the output, remove surge by using diodes or
- 3. Use the product, 0.1 sec after supplying power.
- When using separate power supply for the sensor and load, supply power to sensor first.

  4. 12-24VDC power supply should be insulated and limited voltage/current or Class 2, SELV power
- 5. Wire as short as possible and keep away from high voltage lines or power lines, to prevent inductive
- When using switching mode power supply to supply the power, ground F.G. terminal and connect a condenser between 0V and F.G. terminal to remove noise.
- 7. When using sensor with the equipment which generates noise (switching regulator, inverter, servo motor, etc.), ground F.G. terminal of the equipment.
- . This unit may be used in the following environments
- (1) Indoors (in the environment condition rated in 'Specifications')
- ③Pollution degree 3 (4) Installation category II

# ■ Major Products

- Fiber Optic Sensors Temperature/Humidity Transducers
- SSRs/Power Controllers
- Counters
- Door Side Sensors
- Proximity Sensors
- Panel Meters ■ Pressure Sensors
- Rotary Encoders ■ Display Units
- Connectors/Sockets Sensor Controllers
- Switching Mode Power Supplies ■ Control Switches/Lamps/Buzzers
- I/O Terminal Blocks & CablesStepper Motors/Drivers/Motion Controllers
- Graphic/Logic Panels
- Field Network Devices
- Laser Marking System (Fiber, CO₂, Nd: YAG)
- Laser Welding/Cutting System

# **Autonics** Corporation http://www.autor

18, Bansong-ro 513 be Korea, 48002 TEL: 82-51-519-3232

DRW170725AC